

HPF Sequence Panel, Injection Panel Wiring

Sequence Panel + Injection Pump Wiring Instructions



Before You Begin

Make sure you have read through the instructions and fully understand the procedures
Spare wire (16 AWG)
Wire Nuts
Screwdriver Set
Wire Strippers

HPF Sequence Panel, Injection Panel Wiring


FIG-024-HPF_Panel_Wiring-01

Procedure
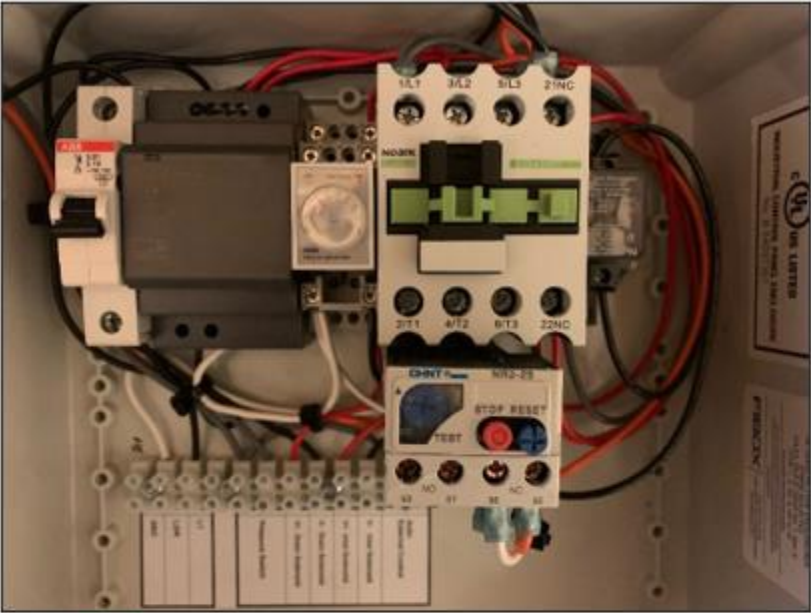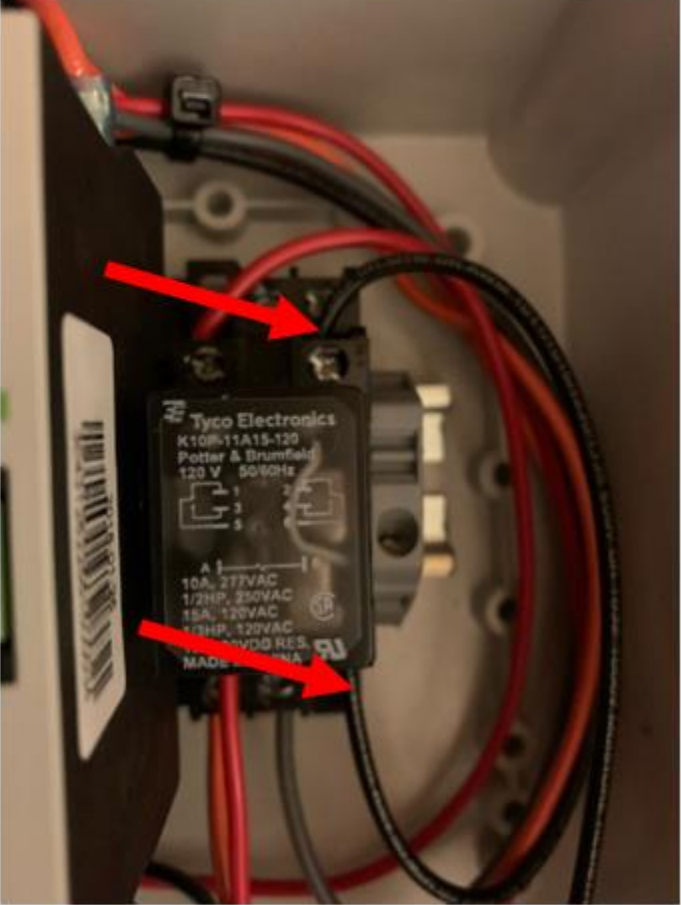
<p>1. Disconnect power to the sequence panel and open the panel</p>	
<p>2. Disconnect the black wires from the relay shown in the image on the right</p>	

HPF Sequence Panel, Injection Panel Wiring

3. Use wire nut to connect the black wires together

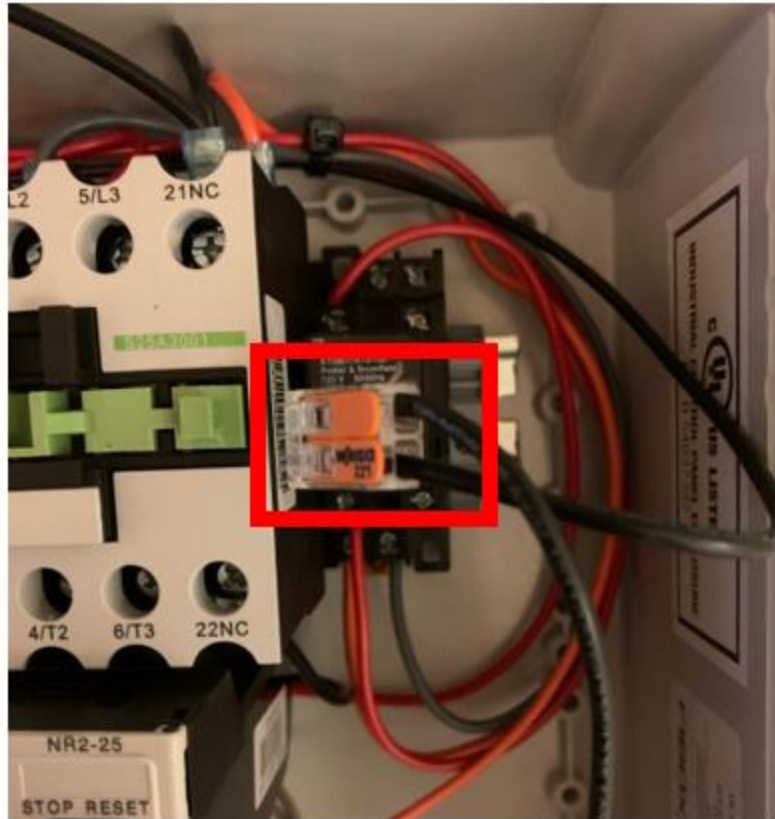


4. Connect Neutral and ground from the injection pump to neutral and ground in the panel.

Connect L1 from the injection pump cable to one side of the relay.

Connect L1 from the Terminal Strip in the panel to the other side of the relay.

See next page for a larger image.

NOTE: POWER CABLE FOR PANEL NOT SHOWN

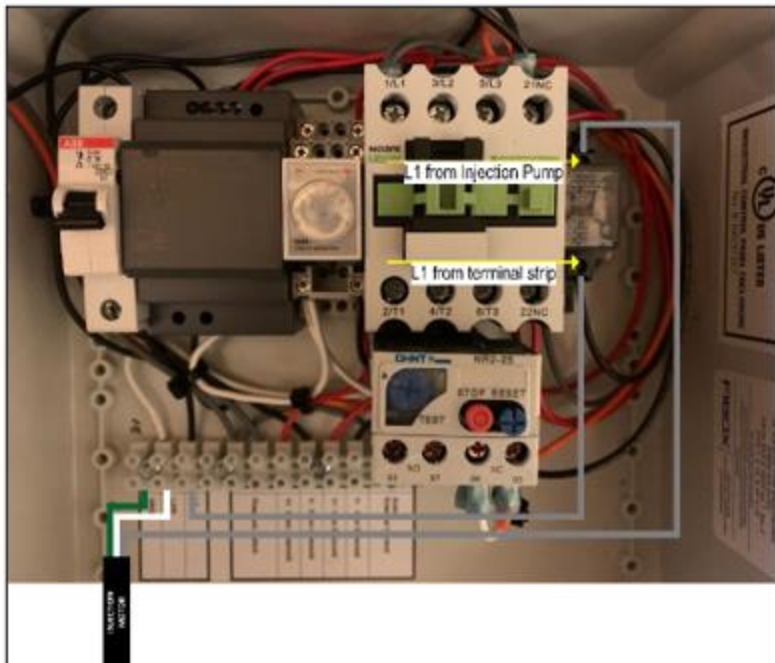

HPF Sequence Panel, Injection Panel Wiring

